



Kayu Canada Inc. Installing Hardwood Decking Tiles

Step 1 - Prepare the area


Make sure the area is clean and level, remove any debris from the area that could get in the way during installation.

Step 2 - Begin Installation

Start with your first tile at one corner of the space.

Each of our Red Balau Batu Hardwood pre-drilled each corner to fit 1 tile connector.

Make sure each tile has 1 tile connector per corner. The tile connectors are easily customizable depending on the position of the tile.

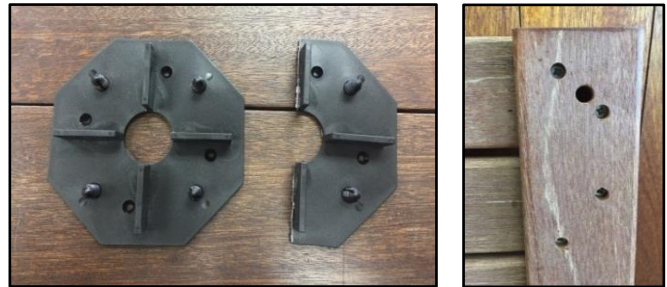

For 1m x 1m tiles (40" X 40"), ensure there is parameter support every 500 mm, and one in each center. We advise that you order extra connectors to be cut and modified for each of those locations, and drilling a hole or screwing in from the back side of the connectors.

The recommended best installation method is to have a sleeper every 500mm OC. Then screw the tiles to the sleepers, this provides a much stronger and level installation. No plastic connectors are required with this installation method.

Sleepers typically 2 x 4 (1-1/2" x 3-1/2") treated, but sleeper thickness subject to height restrictions on site. Please contact for technical recommendations.

Fastening options (both recommended):

1. Screws can be fastened in between the slats into the sleepers
2. Screws can be countersunk on all corners for easier access

Step 3 - Continue & Finish Installation

Continuing installing the remaining tiles in a pattern of your choosing.

The tiles are easy to customize to fit any shaped space.

Step 4 - Enjoy

Once complete you are now able to enjoy your own tropical hardwood deck.

Kick back and enjoy the natural beauty.



For the complete installation video, please watch it on our website at www.kayu.ca

Please note: The following instructions are for flat condo balcony application, for flat roof application please call for expert advice.